
INSTRUCTIONS


Your finely engineered Piano-Lodeon can be played by you as a regular piano or as a fully automatic player piano (you can also play along while it runs automatically). To play automatically:


- 1. Plug into conventional household 110V A. C. outlet only.
- 2. Turn on MOTOR SWITCH.
- 3. Place player roll in upper music roll chamber by first inserting rounded end of spool into round hole at left side. Be sure right end of spool is fully engaged in fitting at right.
- 4. Pull paper down across TRACKER BAR and insert through slot in TAKE-UP-SPOOL, pulling out approximately two to four inches of paper through slot (see illustration).
- 5. Push PLAY LEVER down to start your player roll. Be sure paper wraps tightly around TAKE-UP SPOOL.
- 6. After song is completed, push PLAY LEVER up to rewind your player roll.
- 7. If paper roll unwinds from upper spool, place PLAY LEVER in STOP position, and thread paper upward through slot in spool, pull out two to four inches and rewind by pushing lever up.
- 8. To remove player roll, press spool to the left and pull out right end first.

Use this box for storing your player rolls, and see bottom of box for library of additional songs which may be purchased from your dealer or directly from J. Chein & Company, Burlington, N.J.

Store rolls with paper wound tightly around spool and held firm with rubber band.

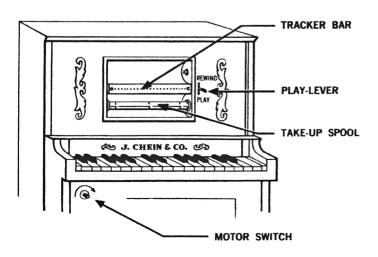

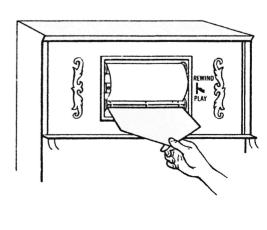

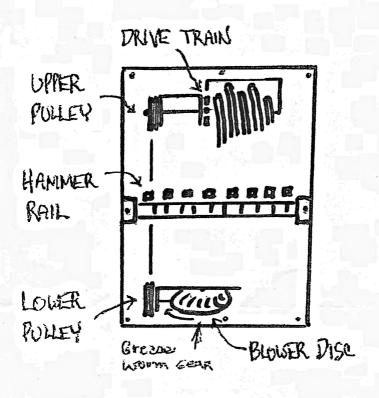

HOSE CONNECTIONS IN CASE ANY NEED REPLACING

TRACKER (A 1 2 3 4 5 6 7 8 9 10 11 BAR B 1 2 3 4 5 6 7 8 9 10 11 12 ROWS to B1,) 2 to A1, 3 to B2 **KEYS** 5 to B3, 6 to A3 to A2, (-7 AT 8 to A4, 9 to B5 to B4. LEFT END 10 to A5, 11 to B6, 12 to A6 DO NOT 13 to B7, 14 to A7, 15 to B8 WORK) 16 to A8, 17 to B9, 18 to A9 19 to B10, 20 to A10 21 to B11, 22 to A11

23 to B12

PIANOLODEON BELT INSTALLATION

- Place PianoLodeon on a stable surface with back showing.
- Remove eight small screws and, while removing back panel, feed power cord back into cover, allowing you to rest the back against a solid object to the right.
- 3) Replace two side middle screws that hold metal hammer rail brackets in place.
- 4) At upper left, press (left) against old belt, derailing it while you turn blower disc clockwise. This revolves the pulleys.
- Discard belt, place new belt behind hammer rail and hook over bottom pulley.
- At top pulley, press belt on all the way while you rotate blower disc clockwise.
- 7) While you have the back off, you may want to clean and lubricate parts.
- 8) Remove the two side screws, replace back, and thread on all screws with your fingers. All should go on easily. If not check for any misalignment. Then tighten all screws lightly.

THE PIANOLODEON

The Chein PianoLodeon is a unique child's toy. It is of a reasonably rugged design, provided that no plastic parts have been broken. With care, it can play for years. While all thirty keys can be played manually, only twenty-three are activated by the piano roll.

A very slow-starting blower motor is characteristic of them all. Then dirt getting into the valving can cause notes not to play. Holding a vacuum hose near the keys in front, and near the valves in back behind the hammer rail may pull out some debris. Only a light suction should be needed.

Broken hammers can be epoxied back together.
Use 5-minute epoxy and hold hammer in alignment
until the epoxy sets. Next day, recoat the break area.
Side braces of a hard lightweight very thin plastic
can be epoxied on for extra strength.

Trying to feed a roll's leader onto the takeup spindle can be awkward. Cut a 1-3/4" long piece of a medium soda straw. Slip v-shaped roll leader into spindle slot and squeeze straw in at center very lightly. On reroll, straw will pop out and release roll.

LUBRICATION OF PIANOLODEONS

To lubricate drive train, first clean all old grease with a clean cloth or Q-tip dipped in paint thinner. An old toothbrush can help.

Clear silicone grease is available at hardware stores in a small container. Zebco makes a very handy little "accordian" dispenser for this purpose sold for fishing reels.

On a toothpick, apply grease at all wear points gear teeth, the sliding washer on reverse side of gear train and shafts. Two drops of sewing machine oil can be placed where motor shaft enters thrust bearing underneath blower disc.

If you ever want to observe motor operation with back off, apply masking tape across all holes in the front tracker bar. This prevents mechanism from attempting to play. Remove tape after back is replaced.

SONG TITLES IN STOCK*

CROUP A - CHRISTMAS PAVORITES

A1 Here Comes Santa Claus

A2 Jingle Bells

A3 Christmas Medley No. 1 – We Three Kings, Adeste Fidelis A4 Christmas Medley No. 2—Silent Night, Deck the Halls

A5 Rudolph the Red Nosed Reindeer

A6 White Christmas

GROUP H-CHILDREN'S MELODIES

B1 Children's Medley—Billy Boy. Brahms Lullaby

B2 Nursery Rhymes No. 1 — Mary Had a Little Lamb, Farmer in The Dell, Twinkle, Twinkle Little Star B3 Nursery Rhymes No. 2—Jack and Jill, Baa, Baa Black Sheep, Little Bo-Peep B4 Nursery Rhymes No. 3—Three Blind Mice.

4 Nursery Rhymes No. 3—Three Blind Mice, London Bridge, Sing a Song of Sixpence

B5 Peter Cottontail

B6 Pop Goes the Weasel

GROUP C-SING ALONGS'

C1 By the Beautiful Sea

C2 Heart of My Heart

C3 | Want a Girl

C4 Let Me Call You Sweetheart

C5 Moonlight Bay

C6 Put Your Arms Around Me, Honey

C7 Shine on Harvest Moon

C8 Side by Side

C9 When the Red, Red Robin C10 When You Wore a Tulip

C11 Whispering

C12 You Are My Sunshine

GROUP D-JAZZ & BLUES

D1 Basin Street Blues

D2 I've Found a New Baby

D3 Old Piano Roll Blues

D4 St. Louis Blues

D5 Twelfth Street Rag

D6 When The Saints Come Marching In

GROUP E-GENERAL

E1 Ain't She Sweet

E2 America

E3 Beer Barrel Polka

E4 Carolina in The Mornin' E5 Darktown Strutters Ball

E6 Margie

E7 Melody in F - Rubenstein

E8 Spring Song, Op. 2, No. 30 - Mendelsohn

E9 Waltz Medley No. I - Daisy, Daisy,

After the Ball

E10 Waltz Medley No. 2—Sidewalks of New York, Sweet Rosie O'Grady

E11 Peppermint Twist

E12 Yellow Bird

New releases periodically issued